






PQ00

Label Printer

PUQU

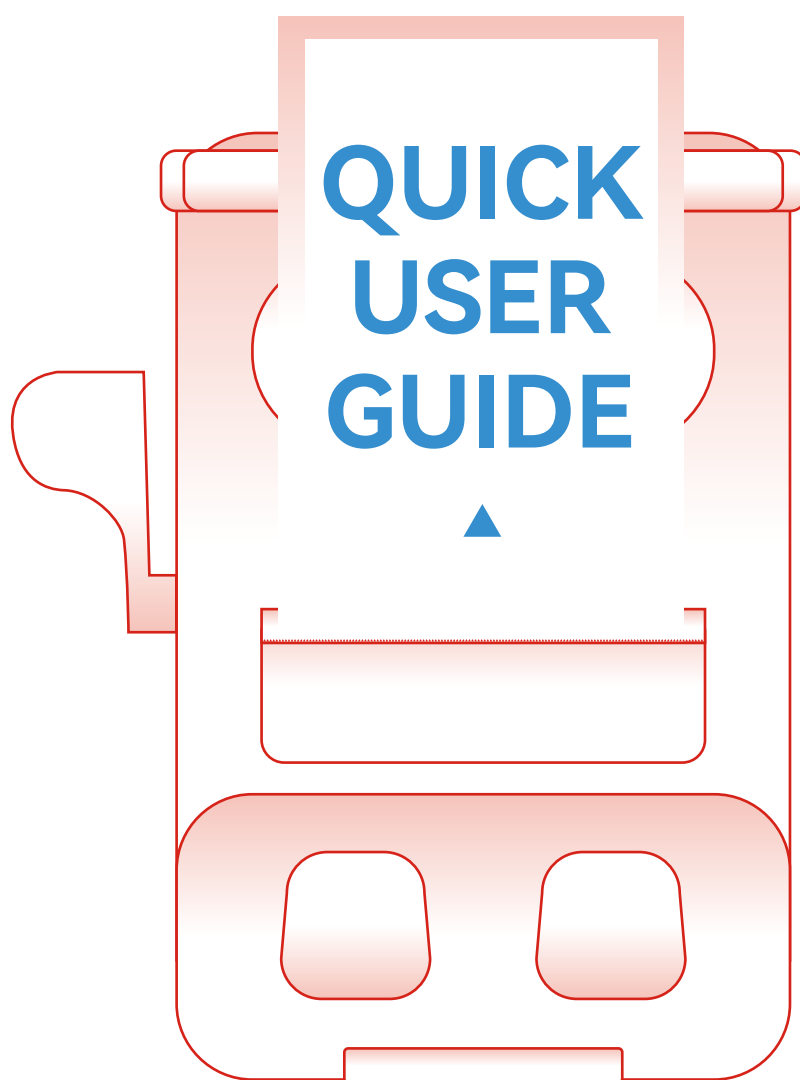

01 PACKING LIST
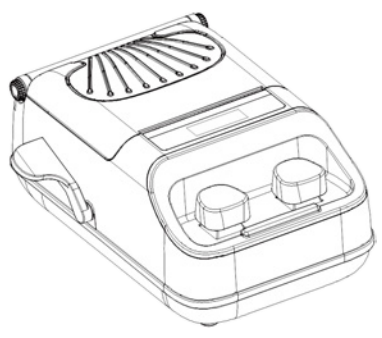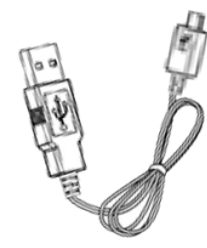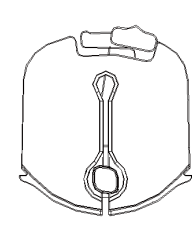
<p>01</p>  <p>PQ00 LABEL PRINTER</p>	<p>02</p>  <p>USB DATA CABLE *1</p>	<p>03</p>  <p>BUILT IN BAFFLE *1</p>	<p>04</p>  <p>BUILT IN RECHARGEABLE BATTERY *1</p>
---	--	---	---

SAFETY INSTRUCTIONS

! SAFETY INSTRUCTIONS

THIS PRODUCT IS NOT EQUIPPED WITH A STANDARD POWER ADAPTER. PLEASE BE SURE TO USE 3C CERTIFICATION AND MEET THE STANDARD REQUIREMENTS.

02 DIMENSION STANDARD



20mm 92mm

WIDTH:112mm

LABEL PRINTER

PQ00













145mm 63mm


LENGTH:145MM

HEIGHT:63MM

03 EQUIPMENT PARAMETERS


 Print method	Thermal printing	 Connection mode	Android & iOS & PC
 Print speed	25-56mm/s	 Power access	DC5V/1.5A
 Dot each row	384 D/L	 Paper roll diameter	50mm
 Print width	48mm	 Paper thickness	0.06~0.08mm
 Print interface	Bluetooth + USB	 Barcode type	Barcode/QRCode

04 COMPONENT DESCRIPTION

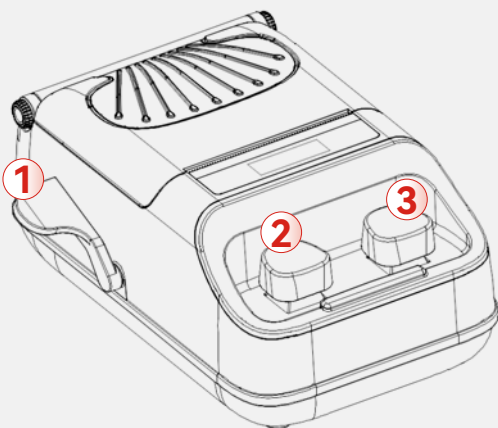


No.1

- ① Cover opening handle
- ② Left button (Power key/Option)
- ③ Right button (Confirm/Feeding)

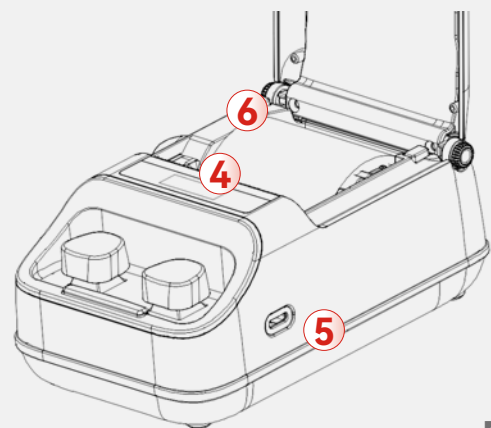


No.2

- ④ Display Screen
- ⑤ USB interface
- ⑥ Paper storage

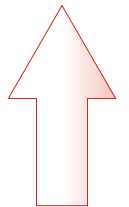

05 PAPER ROLL INSTALLATION

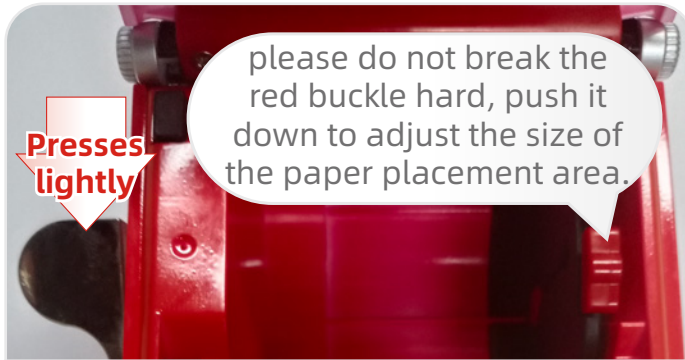


Step 1

Please press on cover opening handle, open the paper storage



Step 2

Please put the paper roll to the left (printing side face to up), slide the baffle to the left

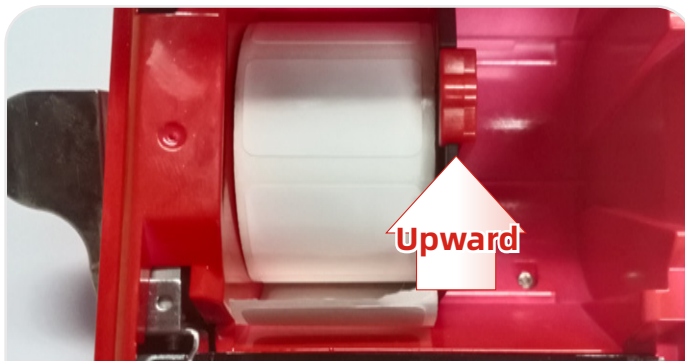

Step 3

Please push the baffle buckle upward to lock the baffle position



Step 4

Please fasten the cover down and press the paper head



Press on right button
feeding test



💡 Maintenance Tips



We recommended you to charge regularly to prevent battery aging if the machine is not used for a long time.



It is recommended to clean and maintain the print head regularly. Use a cotton swab dipped in alcohol to wipe the print head and prolong its service life.



LEFT BUTTON



RIGHT BUTTON

POWER OFF STATE

Press the left button long time to turn on the machine, Ring! The display screen lights up to enter the initial state.

POWER ON STATE

Press the right button long time to turn off the machine, Ring! The display screen shut down; press the left button to enter the menu mode.

Power On state, (not in the menu mode) press right button to feed the paper.


IN MENU MODE

Click on the left button to choose different menu options, the menu options include print darkness; print speed; paper gap, auto feeding and auto power off. No operations for 3 seconds, or press the left button for 3 seconds to exit the menu mode and return to the initial state.

Click on the right button to cycle through the configuration items of the current option

INITIAL STATE

Display Screen

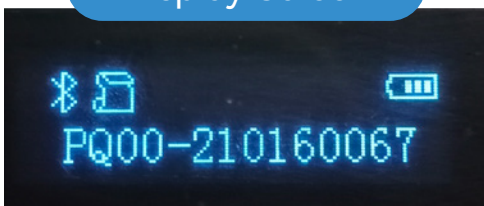


PQ00-210160067 Serial number

Bluetooth、Paper Storage State、
Battery State、Machine ID

Screen indicator


- / Bluetooth connected / not connected
- / Have paper / No paper
- / Battery is charging/ charging is full
- USB data cable connection transmission
- Cover is opened
- Battery is powering
- Menu setting

PRECONDITIONS

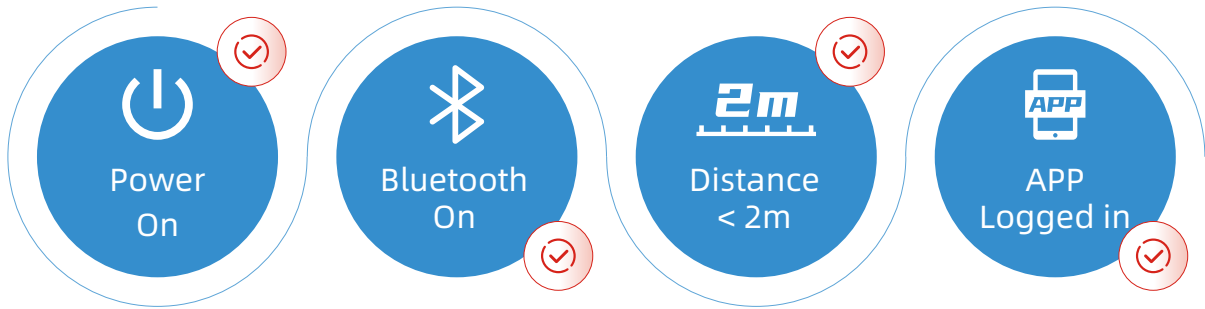

STEPS OF CONNECTION


- Click on the connection button from the setting interface
- or click the print icon in the upper right corner of the home page.

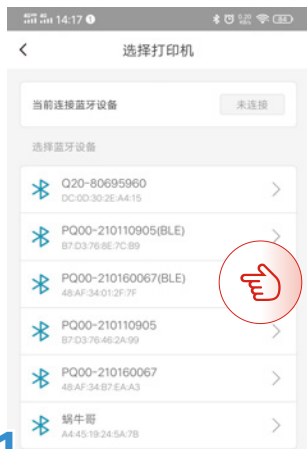

Step 1

Select the printer you want to connect

Choose the Bluetooth device matching the corresponding printer model

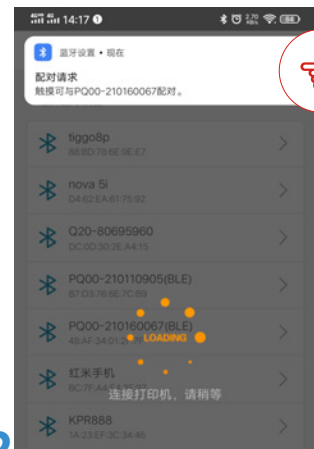

Step 2

Bluetooth setting pairing request




Step 3

Pairing Bluetooth devices






Step 4


the corresponding Bluetooth device "connected"

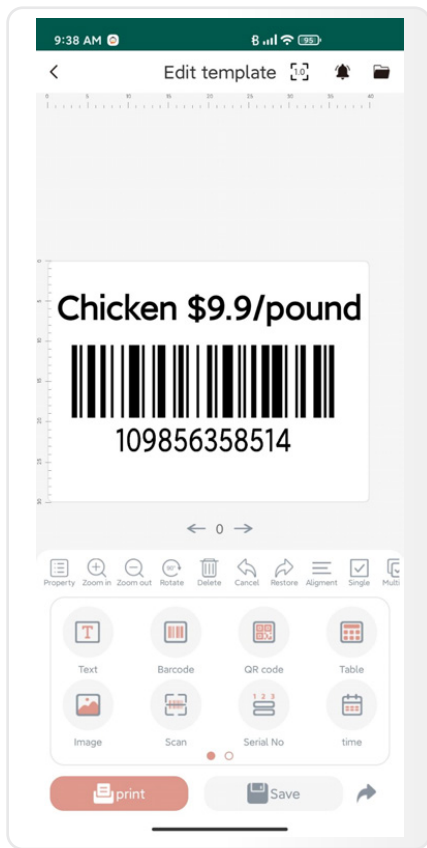

APP Loading APP

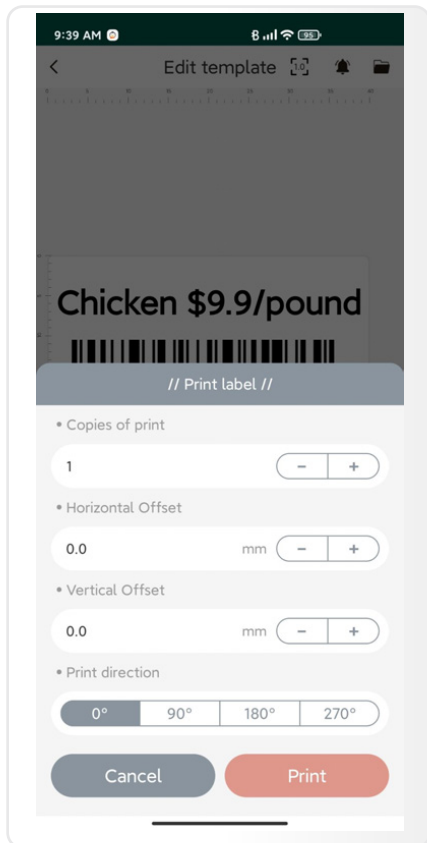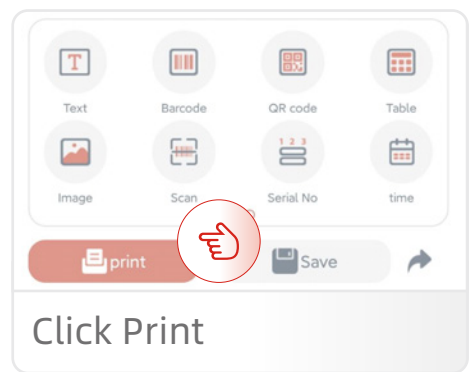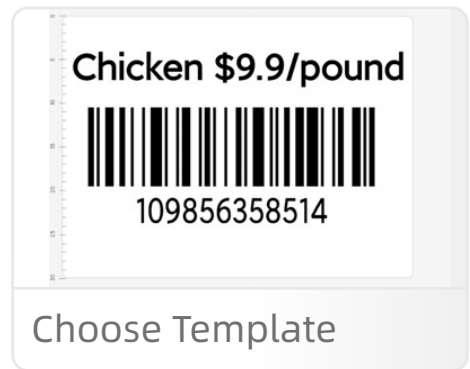

Print Settings

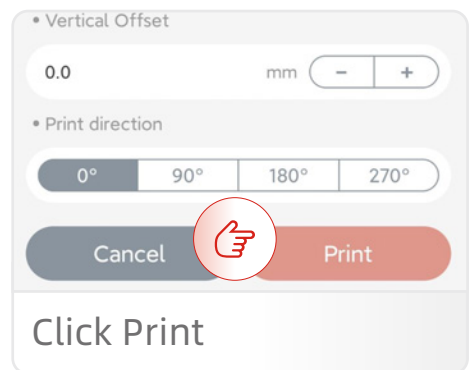

PUQU

 <https://www.puqulabel.com/>



APP Download



PUQU Official Account